



## Base

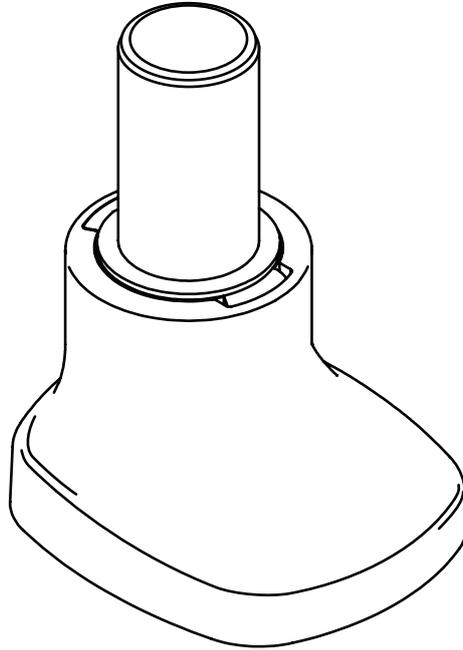

 
### COMPONENT CHECKLIST

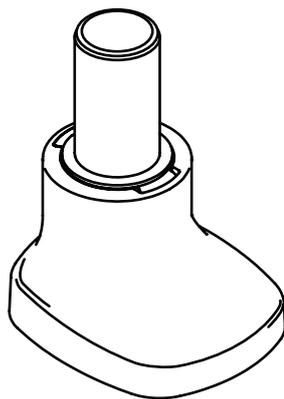

**A**  
Base  
(x1)



**B**  
Screw  
M8x16  
(x1)



**C**  
Screw  
M8x35  
(x1)

Desk 

### REQUIRED TOOLS


- All tools provided

### IMPORTANT INFORMATION

- ! Please ensure this product is installed as per these installation instructions.
- ! This product is compatible with AWM Series Arms and Fixings.
- ! The manufacturer accepts no responsibility for incorrect installation.

## 1. Attach base to fixing (fixing sold separately)


1.1 Follow the installation guide provided with the fixing to attach the Base and fit it to the worksurface.

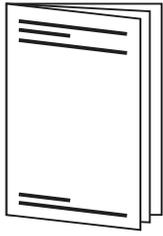


### AWM Fixing options



 
**Bolt Through Kit**  
AWM-FB




**F Clamp**  
AWM-FF

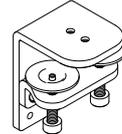

**Heavy Duty F Clamp**  
AWM-FH

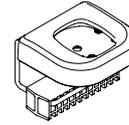

**C Clamp**  
AWM-FC

 


**Grommet Clamp**  
AC-GC


## 2. Set arm rotation to 180° (optional)

Note: default arm rotation is set to rotate 360°


2.1 Remove plastic sleeve.

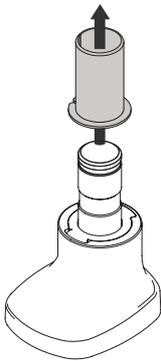

2.2 To remove rotation ring press down on front edge and lift.

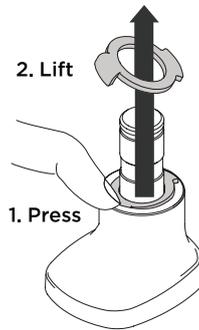


2.3 Replace rotation ring in the desired orientation.

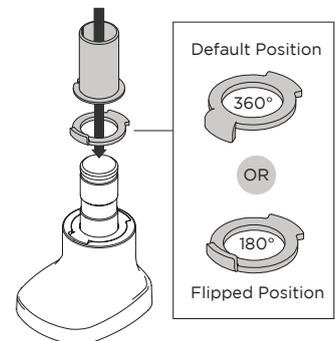


## 3. Fit arm onto Base

3.1 Push arm onto base.

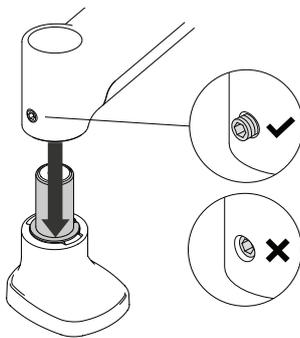


**Note:** Arm sold separately

3.2 Ensure arm is fully pushed onto base.

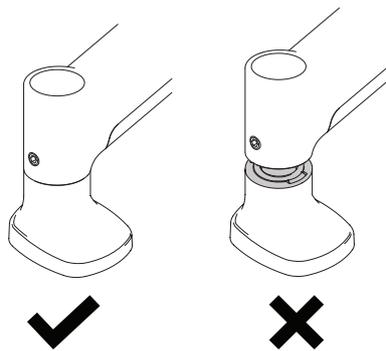

3.3 Tighten set screw.

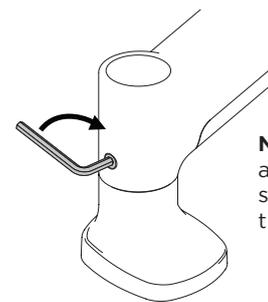

**Note:** Check the arm rotation is smooth after tightening.