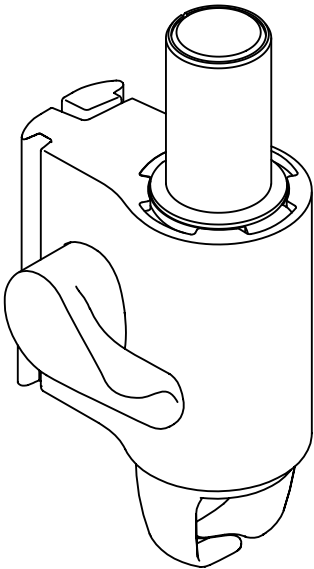 
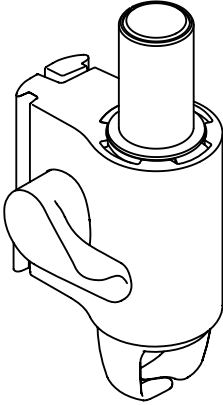 




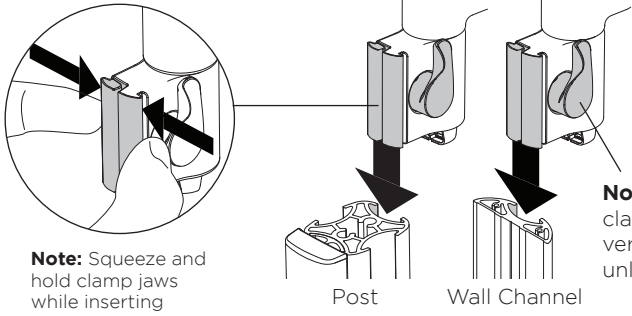 
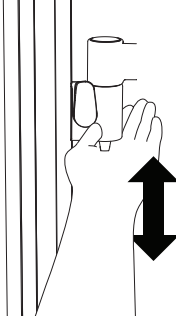 
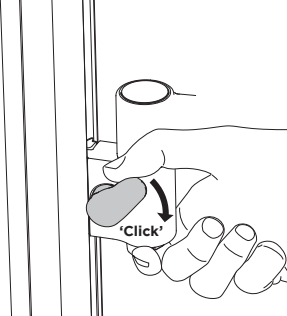 
Post Clamp



<div>COMPONENT CHECKLIST</div> <div><div>A Post Clamp (x1)</div></div>	<div>Desk</div> <div>Wall</div> <div>REQUIRED TOOLS<div>• All tools provided</div></div>
---	--

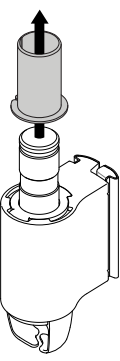 
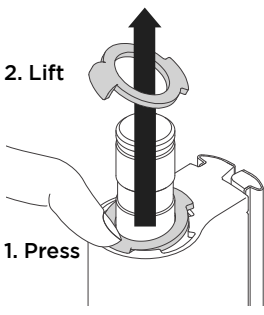 
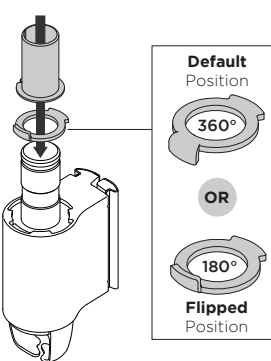 
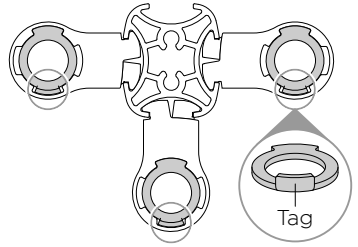 
<div>IMPORTANT INFORMATION</div> <div><div>! Please ensure this product is installed as per these installation instructions.</div><div>! This product is compatible with AWM Series Arms, Posts and Wall Channels.</div><div>! The manufacturer accepts no responsibility for incorrect installation.</div></div>

1. Fix Clamp to Post or Wall Channel

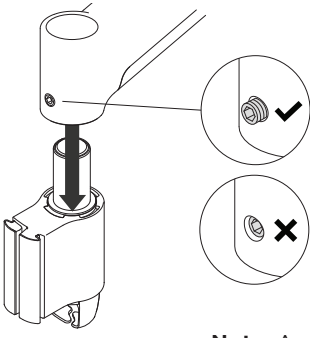 
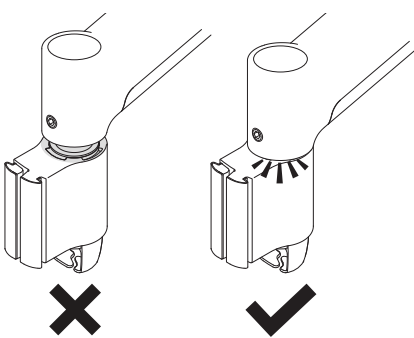 
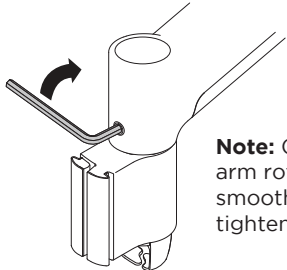 
<p>3.1 Slide Post Clamp into channel</p>  <p>Note: Squeeze and hold clamp jaws while inserting</p> <p>Post Wall Channel</p> <p>Note: Ensure clamp lever is vertical and unlocked</p>	<p>3.2 Move to desired height</p> 	<p>3.3 Lock at preferred height by pushing lever down</p>  <p>'Click'</p>
--	---	---

2. Set arm rotation to 180° (optional)

Note: default arm rotation is set to rotate 360°

<p>2.1 Remove plastic sleeve.</p> 	<p>2.2 Remove rotation ring.</p> <p>2. Lift</p> <p>1. Press</p> 	<p>2.3 Place rotation ring in desired position.</p>  <p>Default Position 360° OR 180° Flipped Position</p>	 <p>Note: Place the rotation ring depending on what post channel the arm will be attached to. The tag should always face towards the user.</p>
---	---	--	--

3. Fit AWM Series arm onto Post Clamp

<p>3.1 Push arm onto clamp.</p>  <p>Note: Arm sold separately</p>	<p>3.2 Ensure arm is fully pushed onto clamp.</p> 	<p>3.3 Tighten joint screw.</p>  <p>Note: Check the arm rotation is smooth after tightening.</p>
--	---	---